

BEETLE CHASSIS No

YEAR:	FROM:	TO:
1940	1-00 001	1-01 000
1941	1-01 001	1-05 656
1942	1-05 657	1-014 383
1943	1-014 384	1-0032 302
1944	1-032 303	1-051 999
1945	1-052 000	1-053 814
1946	1-053 815	1-063 796
1947	1-063 797	1-072 743
1948	072 744	091 921
1949	091 922	138 554
1950	138 555	220 133
1951	220 134	313 829
1952	313 830	428 156
1953	428 157	575 414
1954	575 415	781 884
1955	781 885	1-060 929
1956	1-060 930	1-394 119
1957	1-394 120	1-774 680
1958	1-774 680	2-226 206
1959	2-226 207	2-801 613
1960	2-801 614	3-551 044
1961	3-551 045	4-400 051
1962	4-400 052	5-225 042
1963	5-225 043	6-016 120
1964	6-016120	115 410 000
1965	115 410 001	116 463 103
1966	116 463 104	117 442 503
1967	117 442 504	118 431 603
1968	118 431 604	119 474 780
1969	119 474 781	110 2473 153
1970	110 2473 154	111 2427 591
1971	111 2427 592	112 2427 792
1972	112 2427 793	113 2438 833
1973	113 2438 834	114 2423 795
1974	114 2423 796	115 2143 743
1975	115 2143 744	116 2071 467
1976	116 2071 468	117 2063 700
1977	117 2063 701	118 2050 000
1978	118 2050 001	119 2108 687
1979	119 2109 688	11A 008 929

1302/3

1970 111-200-001
1971 112-2000-001
1972 133-2212-001
1973 133-2212-117
1974 134-2000-001
1975 135-2000-001
1976 156-2000-001
1977 157-2000-001
1978 158-2000-001
1979 159-2000-001